

Flexible IBC Connection Kit - Assembly Instructions

Kit Contents



Premium Hose



IBC Hozelock Adaptors



Hose gun



Three-way Connector




Push-Fit Adaptors

Step 1

Measure the distance between your IBCS and cut your hose to match the distance.

Then cut the new section in half to give you two equal lengths of hose.

The remainder can then be used for your hose gun.

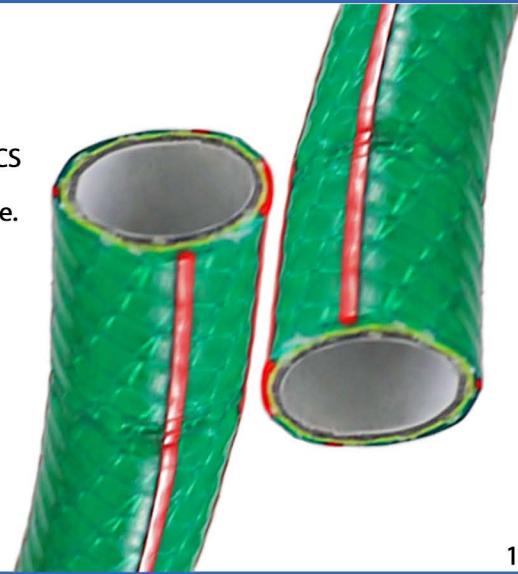

1

Step 2

Thread the clamping collar of each adaptor through the hose and push the quick connector onto the hose. Once the adaptor is seated screw the clamping collar on to secure.

Repeat this process for each end of each section of hose.

2

Step 3

Push the three-way connector and hose gun into the adaptors.

They should attach with a satisfying click!



3

Step 4

Finally, thread your IBC adaptors onto your IBCs and push fit your connector kit on.

Open the valves on your IBC and you're ready to go.

**DIRECT
WATER TANKS**

Tel: 01777 237933

Email: sales@directwatertanks.co.uk

Web: www.directwatertanks.co.uk

4